


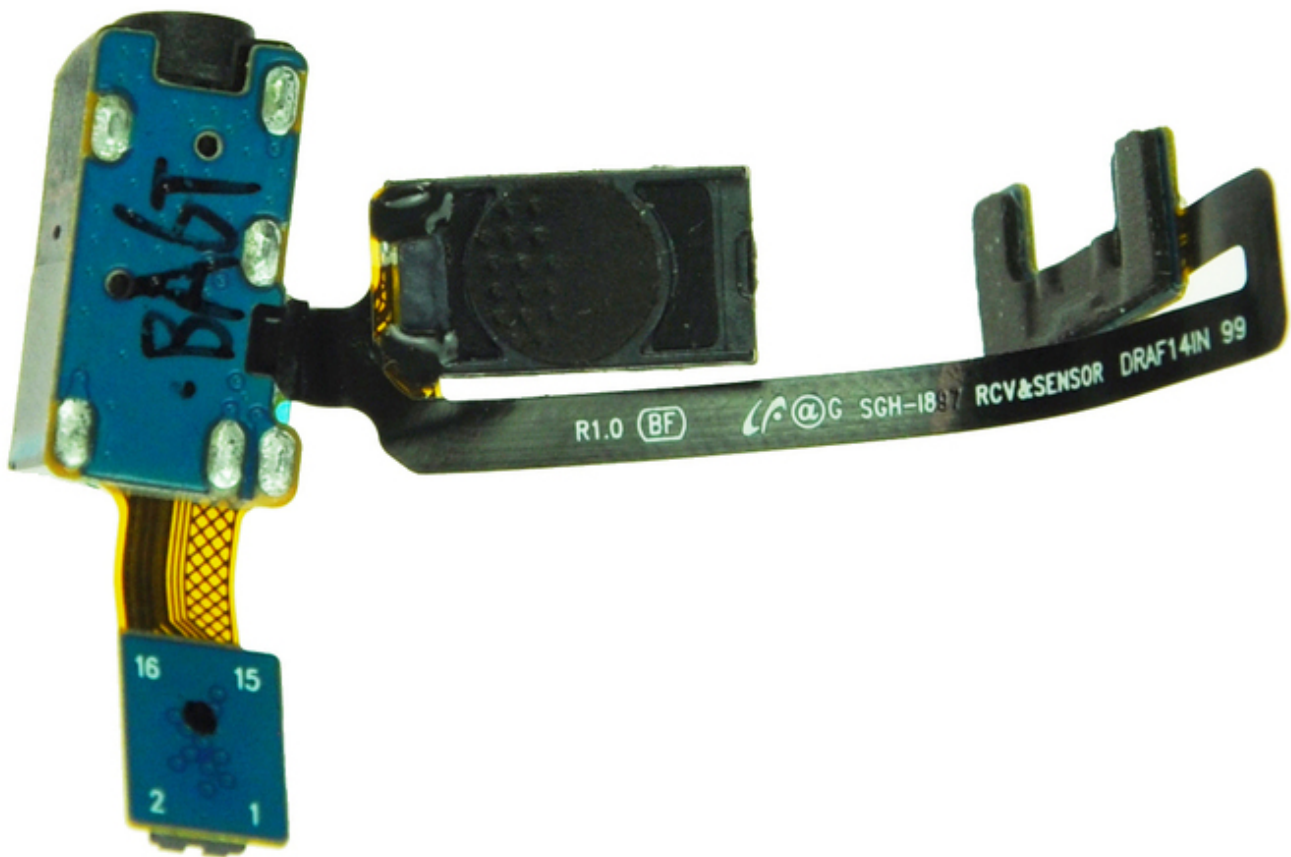

Samsung Captivate 3.5mm Headphone Jack Replacement

Replace the Captivate's 3.5mm headphone jack.

Written By: Christopher



INTRODUCTION


Use this guide to replace your captivates 3.5mm headphone jack.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

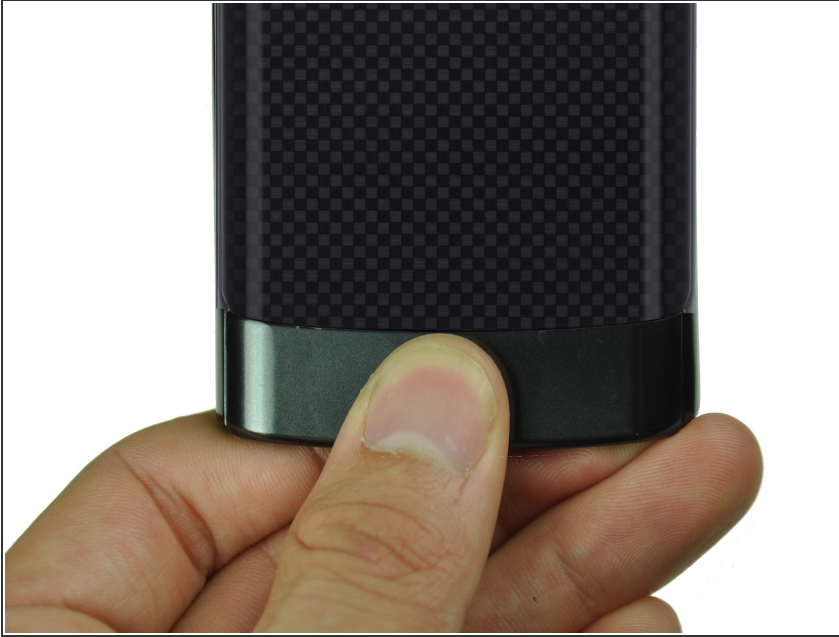

- Remove the back cover by pressing on the bottom section of the phone and sliding the bottom piece downward.
- Lift up the back cover.

Step 2



- Place your finger on the bottom of the battery and lift to remove.

Step 3



- Replace the old battery with the new one.

Step 4 — Rear Case



- Insert the spudger underneath the bottom section of the phone.
- Gently lift and push the spudger to slide the bottom section down to reveal two hidden screws.

Step 5



- Remove the six 4.5mm #000 Phillips screws.

Step 6



- Starting at a bottom corner, use the spudger to separate the rear case from the front display.
- Move the spudger towards the top on both sides. The plastic opening tool is easier to use for this step.


⚠ Be careful when detaching the top. Free each side, stopping short of the center of the cover. Apply backward pressure on both corners with a finger applying pressure on the center, and slide the whole back cover toward the bottom of the device. Note: forcing the cover can result in cracked plastic.

Step 7



- Separate the rear case from the phone.

Step 8 — Antenna Cable

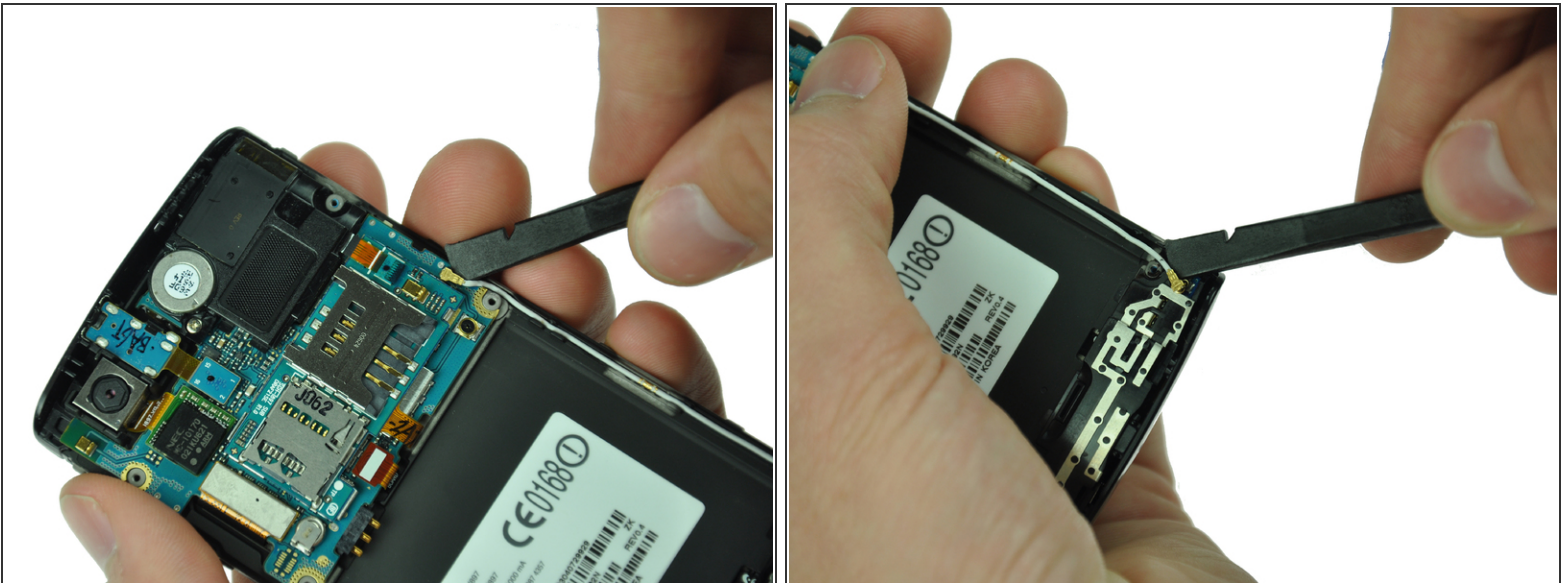

- Use a spudger tool to pry up the antenna cable from the connector on the motherboard.
- Pry up the other end of the cable from the connector on the antenna array.

Step 9 — Motherboard



- Use a spudger to disconnect the three highlighted connectors.
- Pry straight up and be careful to pry against the connector, not the socket on the motherboard itself.

Step 10



- Use your fingers to lift up the logic board from the assembly.

Step 11 — 3.5mm Headphone Jack



- Gently pull up on the audio jack, taking the attached ribbon cable with it.



There is a small amount of glue holding the ribbon cable that attaches the audio jack to the earpiece.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 04:17:02 PM.